

# ► CARPERFORMANCE

## **GM/GMC/CADILLAC ANDROID INSTALL MANUAL.**

Plug n Play for all GM cars exept Corvette C7 and Escalade,they need to be hard wired

Se install for these to cars at the bottom of the manual.

Disassemble the screen and unplug the power cable back of the screen and the lvds cable

Connect the android as picture show. IF YOUR CAR **DONT** HAVE REAR ENTERTAINMENT SYSTEM




**INSTALLATION FOR CARS WITH REAR ENTERTAINMENT SYSTEM (RE)**







**INSTALLATION FOR CARS WITH REAR ENTERTAINMENT SYSTEM (RE)**

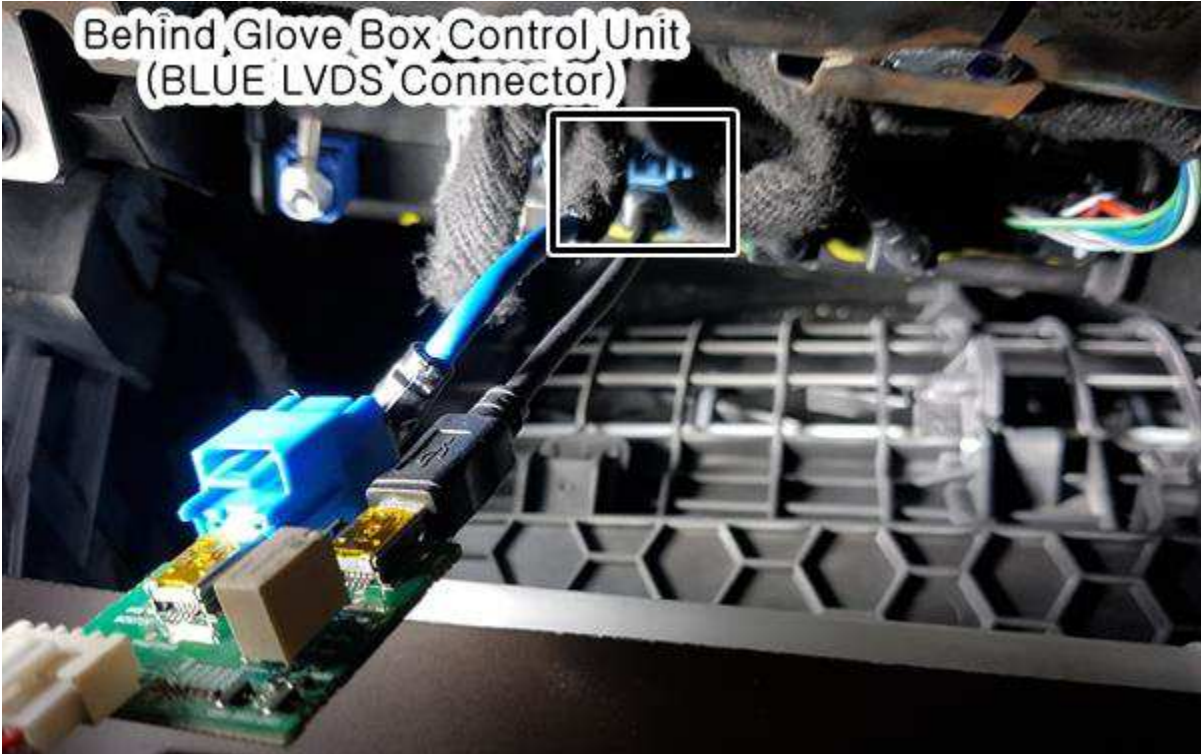

Suburban RE, Tahoe RE, Yukon RE  
LVDS In/Out Connection should be Opposite  
from all other models.

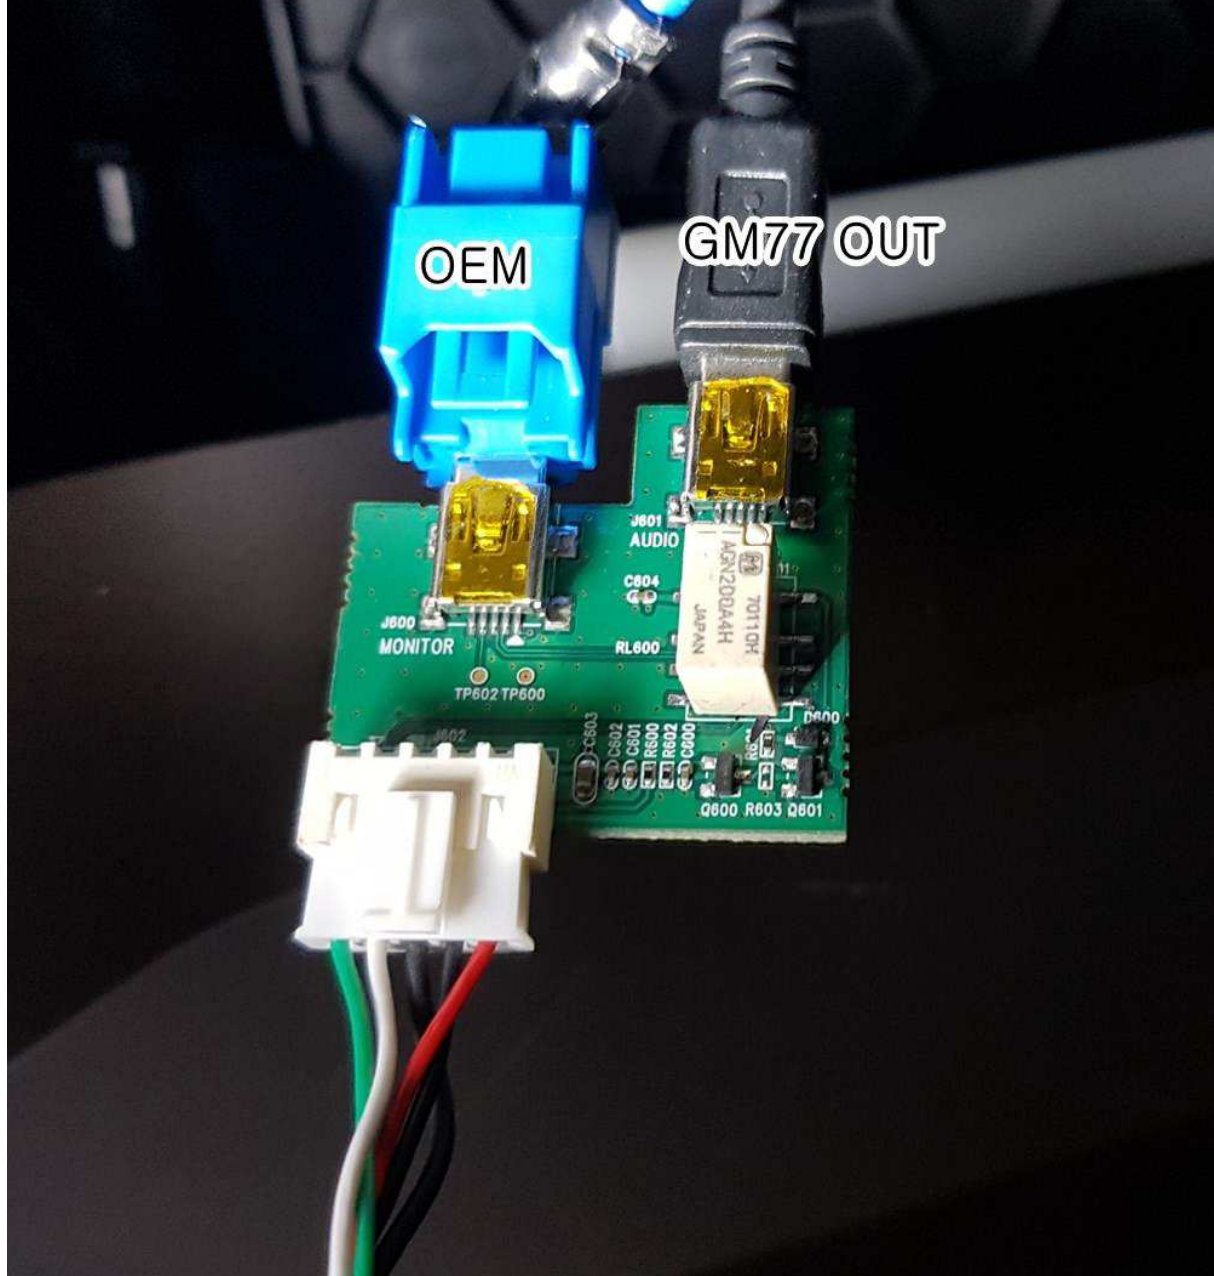



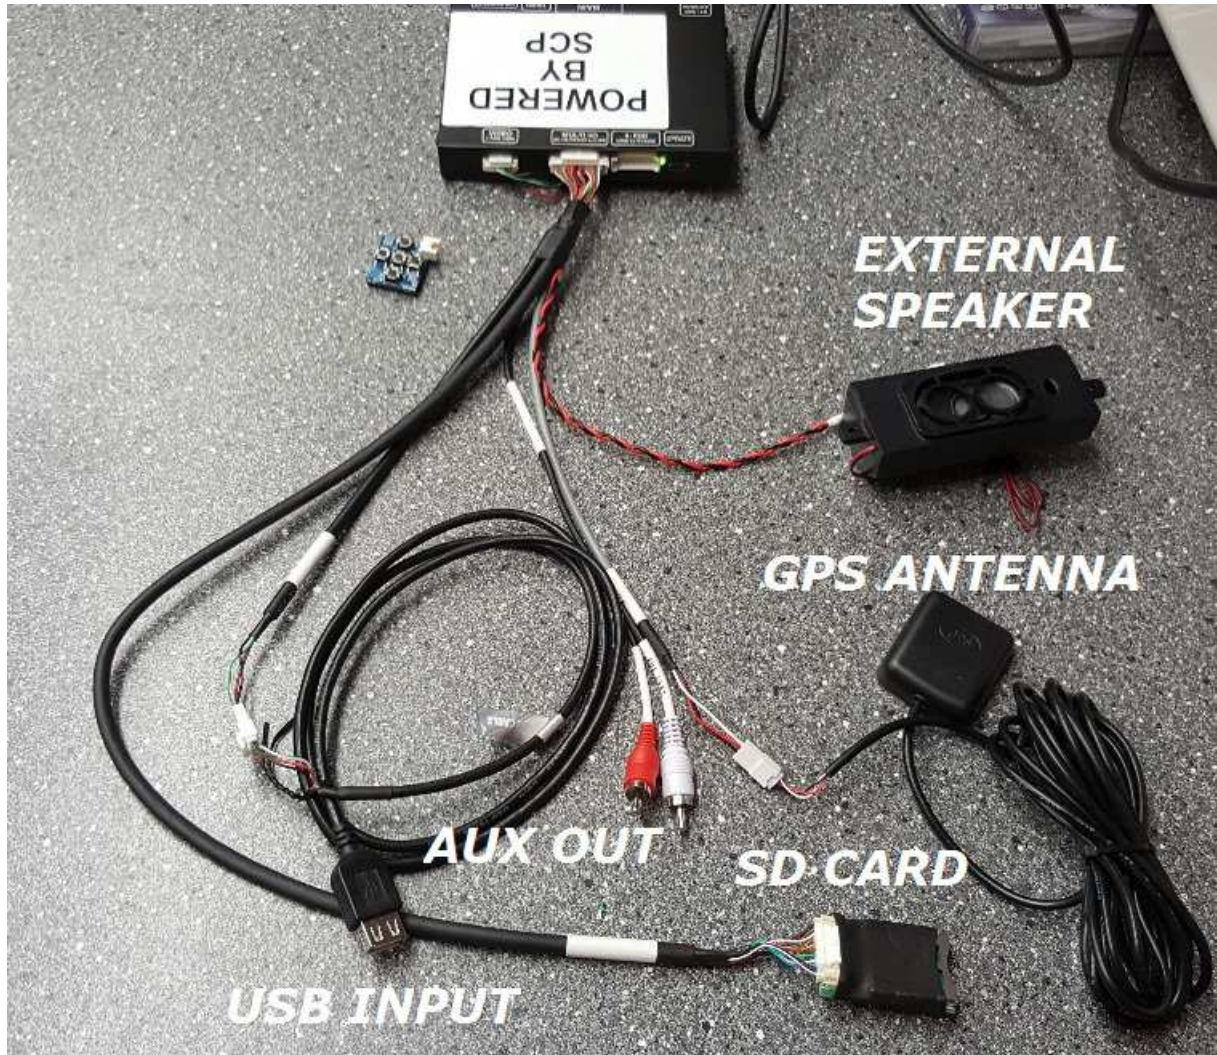

Install the Gps antenna in a good position under the dash and mount the external speaker behind the screen.

The red and white RCA cables is for sound out from android system , you can connect these to the cars aux input ,then you will have full android sound in the car when you select aux in factory system and then switch to android


Sound can also be connected trough the android bluetooth to the cars bluetooth system

External speaker is for if you want to be in the factory system bit still need guide voice sound like from google maps.

Usb input is for movies etc.



Sd card is for movies or offline gps map .

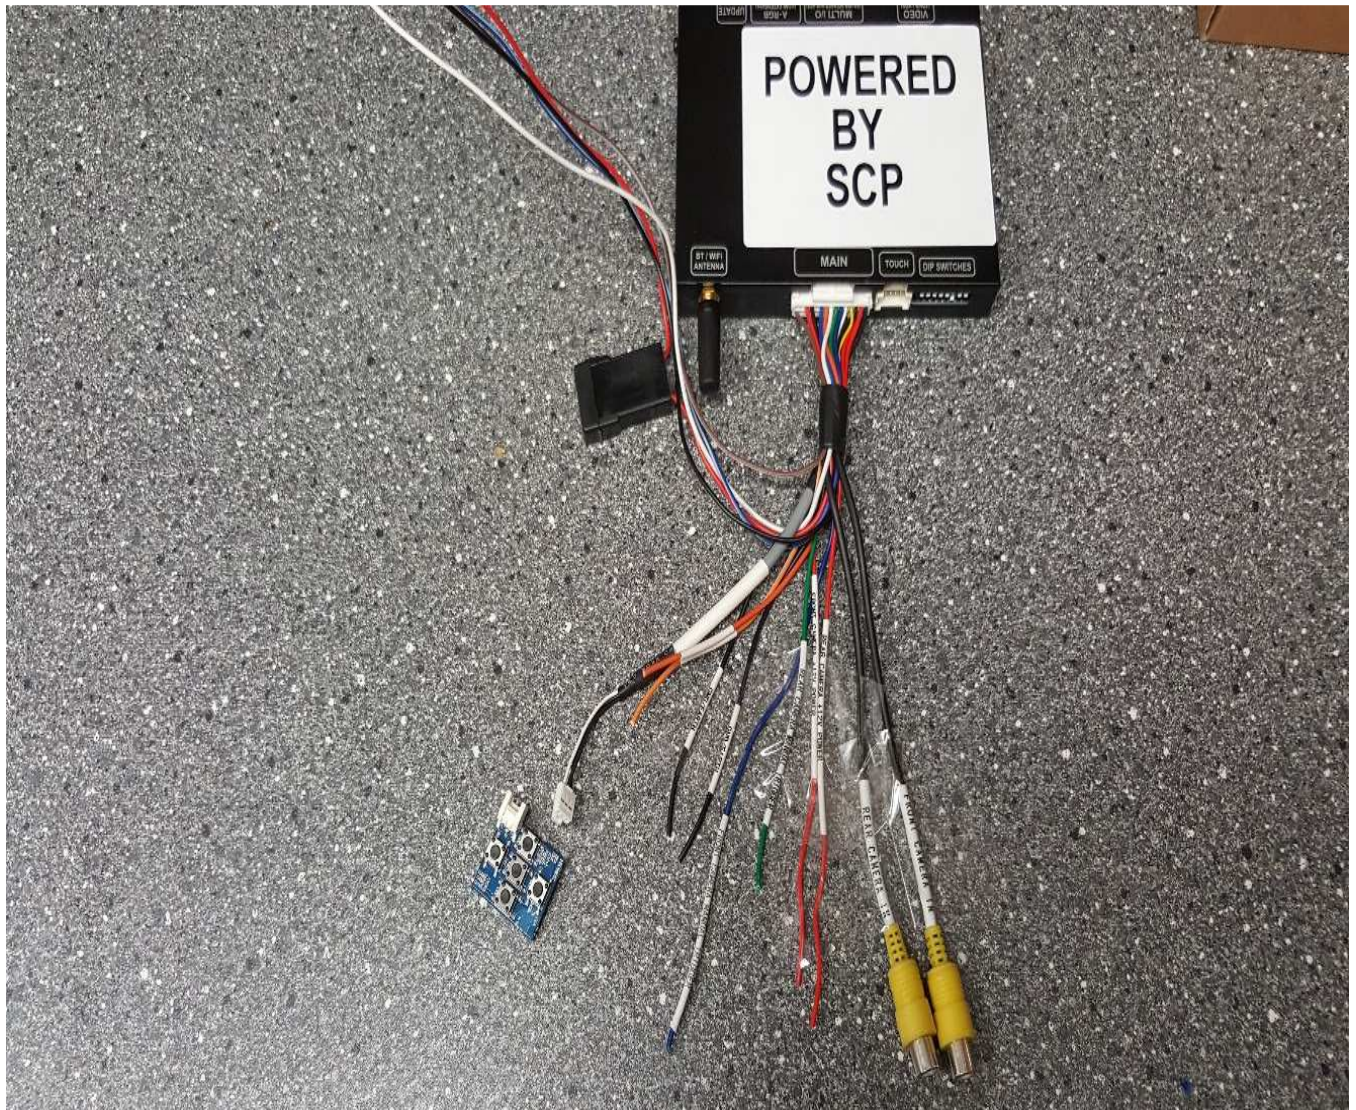

The system has 2 extra video inputs and they are marked front camera and rear camera.

These you can use for extra cameras. If you have OEM rear camera then you can only use the front camera input.

Front camera setup is done by connecting the small switch board and go through the settings, there is a timer setting for front camera as well, the timer starts to show front camera after the car has been in Reverse.

Front camera can also be manually activated with a 2 sec press on the HOME key on the factory radio bezel

The small switch board is to set up if you want to activate the front /rear camera input.

Set the dipswitch to match your car ,after a switch is set you must disconnect power to the module and connect again

Dip switch settings.

ALL OFF [ALL UP] : Chevrolet Malibu, Volt

No.1ON : Chevrolet Corvette C7

No.2ON : Cadillac Escalade, CTS-V

No.3ON : Chevrolet Impala

No.4ON : Chevrolet Cruze8"

No.5ON : CadillacXT5

No.6 ON : Suburban, Tahoe, Yukon, Sierra,  
Acadia, Silverado, Colorado

No.7ON : Suburban RE, Tahoe RE, Yukon RE


Switch to android is done with a 3 sec press on the upper left corner.





# Install instructions for Corvette C7

You need to cut the android harness like in the picture

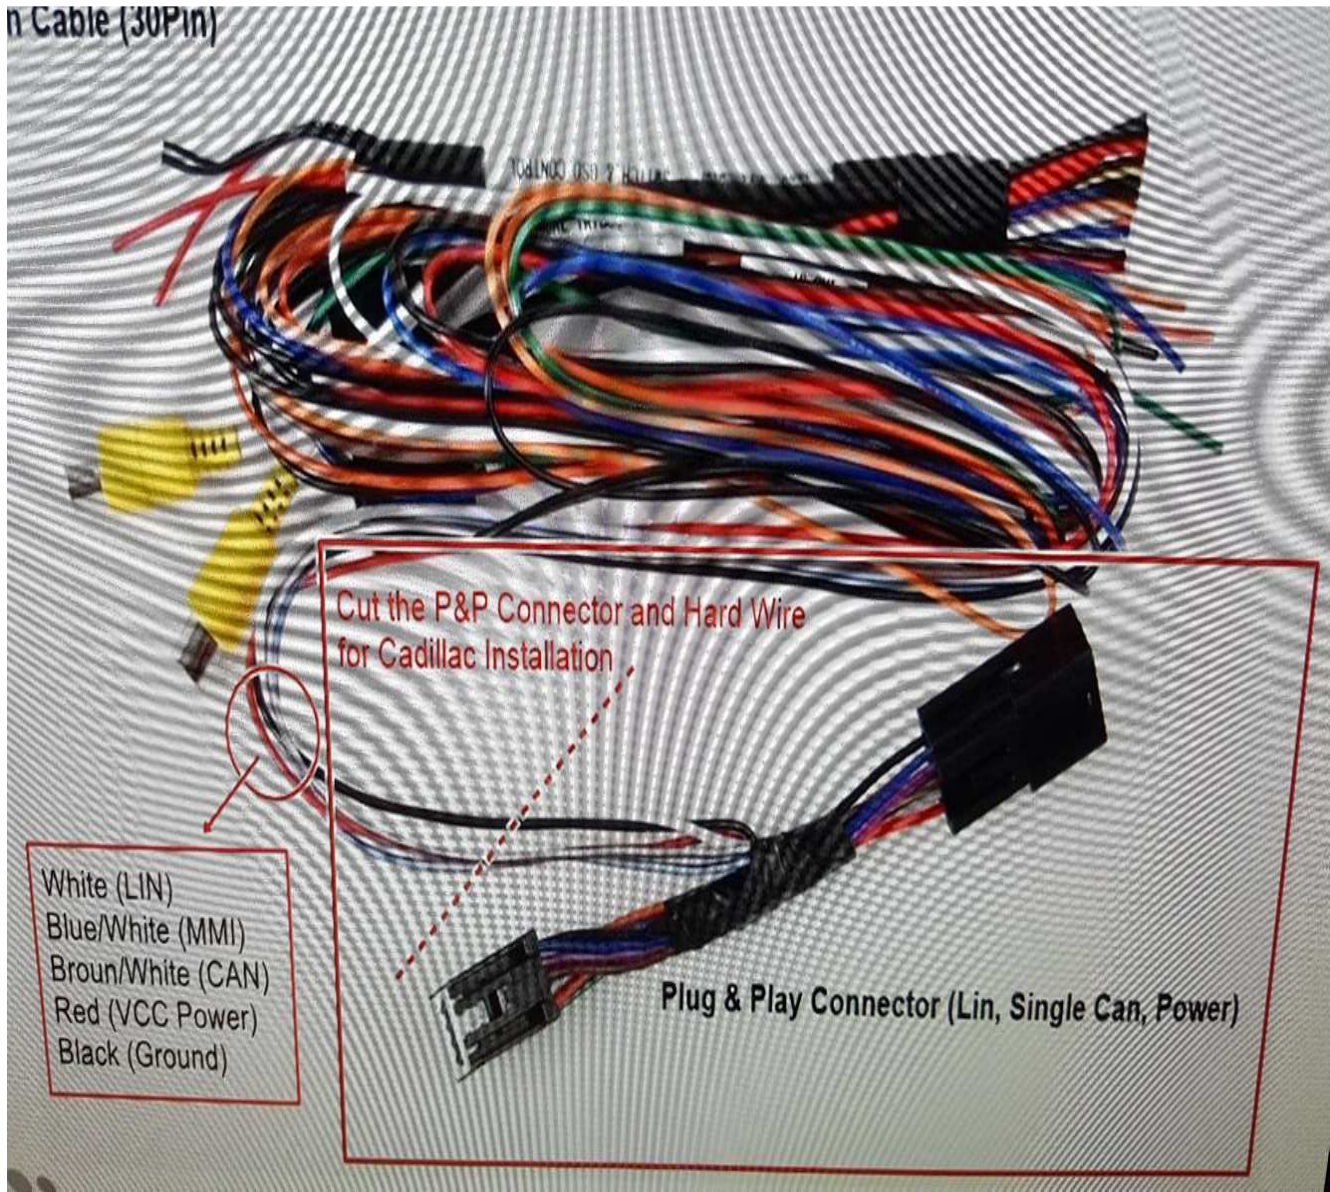




Connect the wires you cut to the factory plug behind the screen.

## Chevrolet Corvette C7 Stingray & Cadillac Escalade

Behind Head Unit

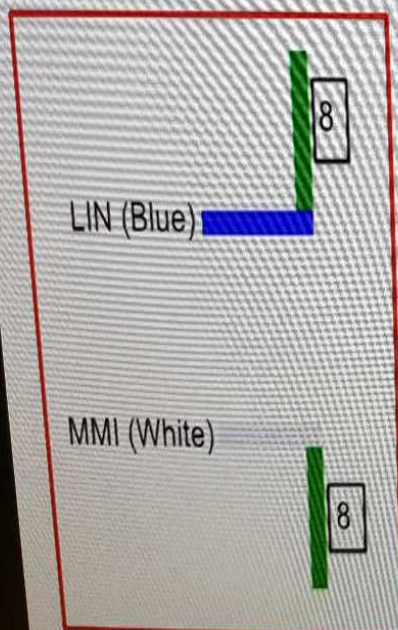


1. B+ Power -> Connect to VCC (RED) Wire
3. CAN -> Connect to CAN High (Brown/white) Wire
8. LIN -> Connect to MMI (Blue) and LIN White) Wire
10. Ground (Earth) -> Connect to GND Black Wire



# Install instructions for Escalade

Cut the wires from the android harness like in the picture below.

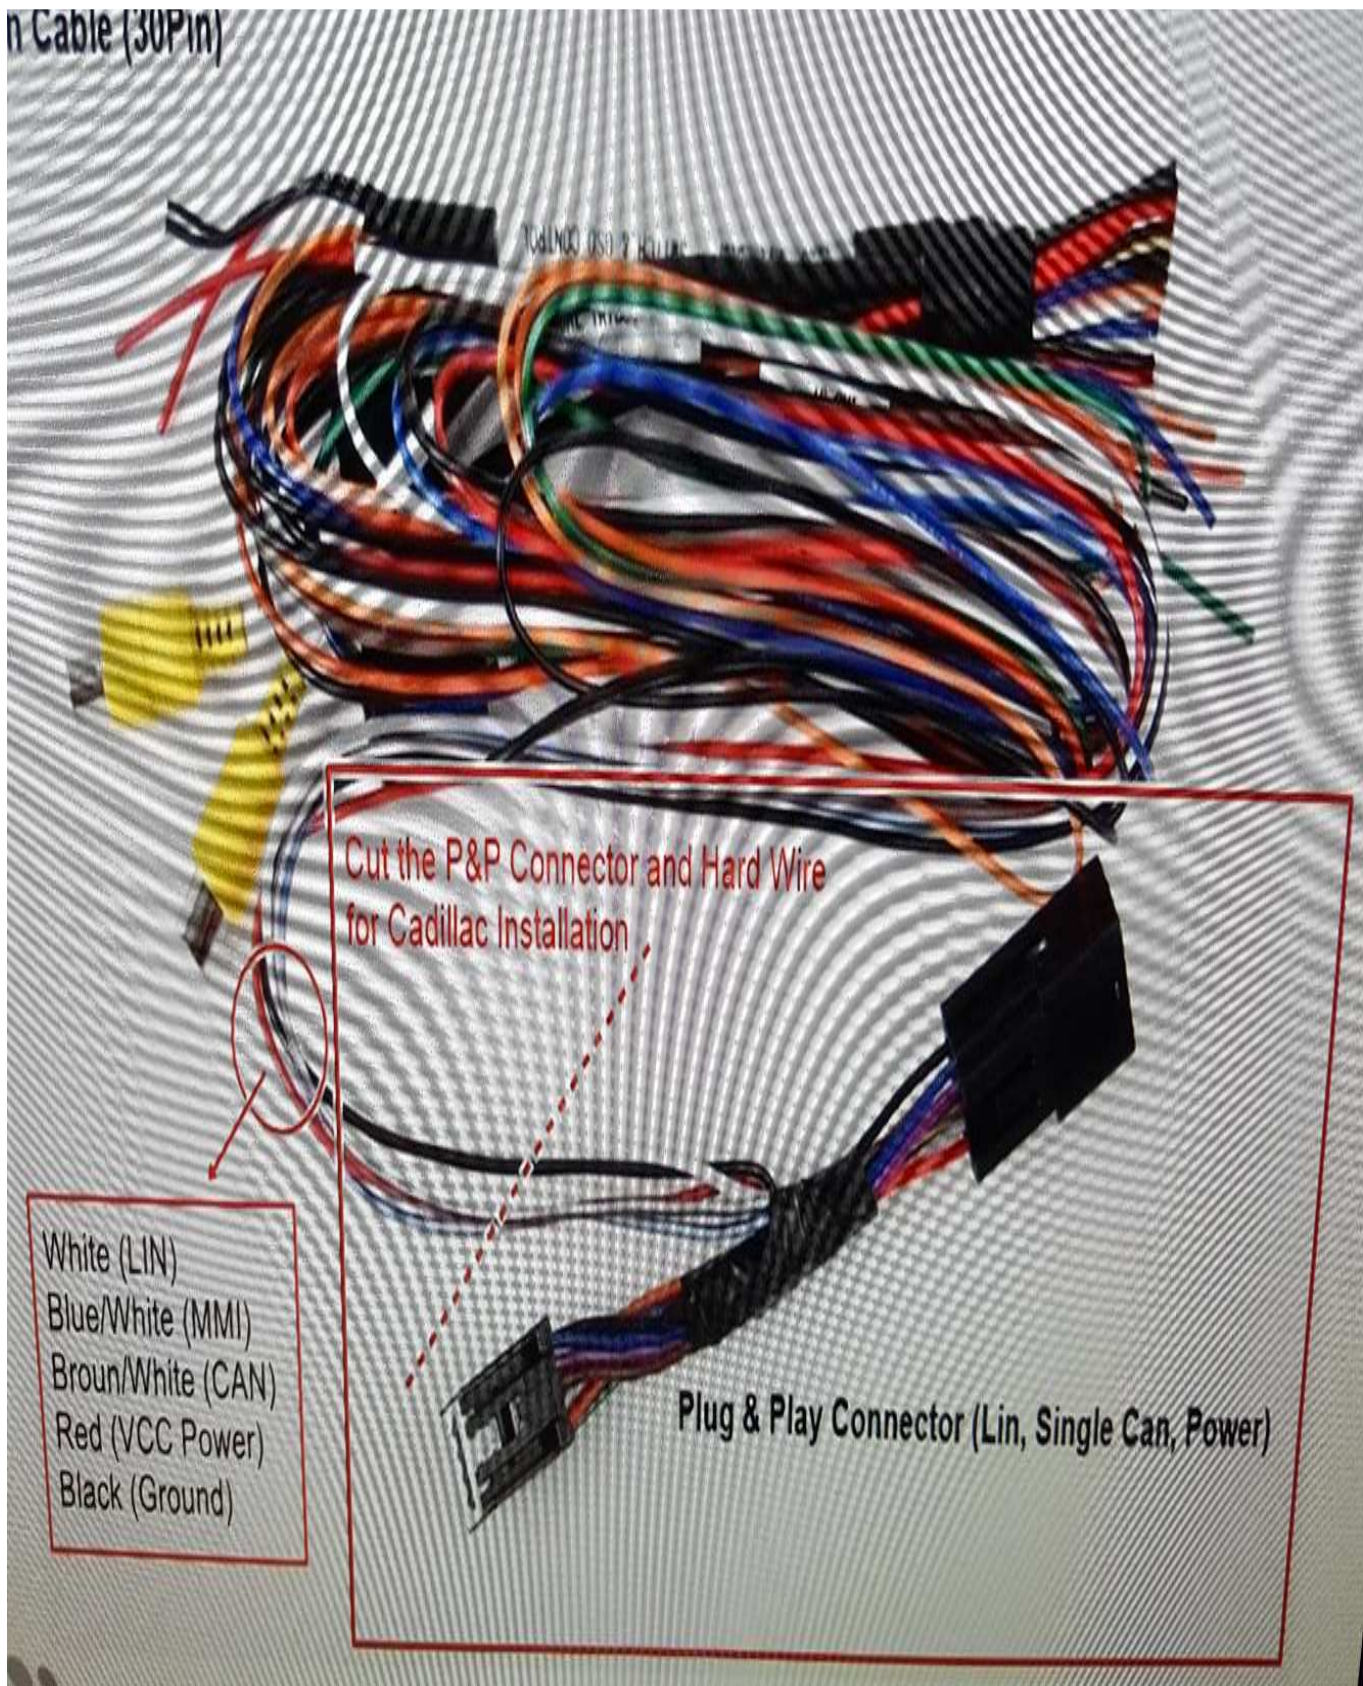



And connect the wires like in the picture to the factory plug behind the screen .

# Installation 4 Cadillac Escalade

#CADILLAC NEW ESCALADE

1	2	3	4	5	6	7	8
					LIN	LIN	LIN
9	10	11	12	13	14	15	16
VCC			CAN				GND

6	lin touch
7	lin button
8	lin button
9	VCC
12	CAN B HIGH
16	GND

